


# Fabco Power

*Setting the Standard in Mobile Power*

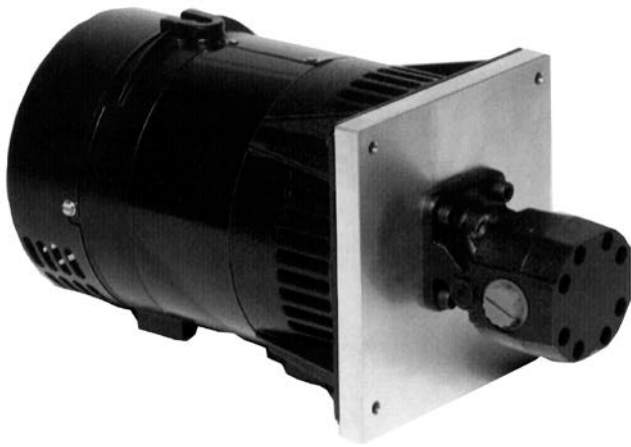

*Instruction Manual for Model*

# **HYDRO 350CXT-6**

*Hydraulic Generator*

*Manufacturing of: Vehicle Mounted Generators • Hydraulic Generators*

*P.O. Box 582 • Chester, NY 10918 • 845-469-9151 • Fax: 845-469-7871 • Web Site/E-mail: [www.fabcopower.com](http://www.fabcopower.com)*

# **GENERAL INFORMATION**

## **MODEL: HYDRO 350CXT-6**

GENERATOR..... BRUSHLESS

GENERATOR..... 3600 (60 Hz)

GENERATOR VOLTAGE..... 120 or 120/240

MOTOR STARTING..... 300% SURGE

VOLTAGE REGULATOR..... INHERENT

OUTPUT..... 3500 WATTS CONTINUOUS  
4000 WATTS PEAK AT  
100°F OIL TEMPERATURE

HYDRAULIC MOTOR..... GEAR TYPE

MAXIMUM SPEED..... 4200RPM  
(3600 RPM IDEAL)

MOTOR SHAFT..... ½ inch

### PORT SIZE

INLET..... 3/4 - 8 S.A.E.

RETURN..... 7/8 - 10 S.A.E.

CASE DRAIN PORT..... 7/16 - 4 S.A.E

# RECOMMENDATIONS

## MODEL: HYDRO 350CXT-6

*HIGH PRESSURE LINE ..... ½ inch*

*LOW PRESSURE LINE..... ¾ inch*

*FLOW RATE ..... 6 to 25 GPM  
(6 GPM IDEAL)*

*FOR BEST RESULTS KEEP HYDRAULIC OIL  
TEMPERATURE BETWEEN 80°F AND 120°F.  
DO NOT EXCEED 175°F.*

*AN OIL COOLER IS RECOMMENDED.*

*MAXIMUM BACK PRESSURE ..... 150 PSI*

*WILL OPERATE ON ANY 2500 PSI OPEN CIRCUIT  
OR CLOSED LOOP SYSTEMS.*

*RECOMMEND FILTER ..... 10m*

*RECOMMEND HYDRAULIC OIL ..... DEXTRON III A.T.F.*

## INSTALLATION TIPS

Excessive pressure in your return line will damage the hydraulic motor seal. High back pressure can be caused by “spikes” sent back through the return from other equipment on a common return line. Another potential problem can develop if several pieces of equipment are connected to one “common” return line causing a high back pressure (150 PSI is the maximum). We recommend you run the return line from the generator back to the cooling tank with a separate line.

You can either run the ¾ inch return line back to the tank or leave the ¾ inch line connected to a common return and run a separate 3/8 inch line from the case drain (located at the bottom of the hydraulic motor) directly back to the tank. Either way you completely eliminate any problem of excessive return line pressure damaging your hydraulic motor.

## **Initial Installation and Start-Up**

**Be sure you set the hydraulic flow (GPM) to the generator at Approximately 62.5 HZ or 3750 RPM with NO electrical load on the generator.**

**By using this setting you will have approximately 60HZ (cycles) or 3600 RPM when you are running at full rated load.**

**One way this can be accomplished is by using a Photo Tachometer on our generator coupling or generator cooling fan.**

*A Photo Tachometer is an inexpensive tool that can be purchased at McMasters, Grainger, Sears or any other electrical supplier.*

## **TECHNICAL INFORMATION**

These self-excited and self-regulating generators, although overall dimensions have been reduced to a minimum, are designed for high-level electrical performance and the maximum in operating reliability.

**PRELIMINARY CHECKS:**

Before touching the machines, perform a thorough and in depth visual inspection, checking that components are correctly connected up and that no cables or terminals are broken or loose.

**STARTING UP:**

Make sure, when starting up, that cooling air intake and discharge openings are free and unblocked. We also recommend (when the machine operates in a dusty environment) do periodic checks to make sure it is properly ventilated

**THE IMPORTANCE OF SPEED:**

Frequency and voltage depend directly on rotation speed. This must be kept as constantly as possible on its nominal value no matter what the load. Drive motor speed control systems generally have a small drop in speed between no load and loaded conditions. We therefore recommend setting no load speed 3÷4% above nominal speed.

**CHECKING VOLTAGE:**


All the machines are regulated during factory testing. If voltage readings differ from the value indicated on the name plate, this maybe caused by a mistaken reading or by a different rotation speed and we recommend regulating motor speed in order to have nominal RPM under loaded conditions.

**CHECKING THE DIODES:**

For the ohmmeter test it is best to disconnect the diode from its circuit. Measure continuity in one direction only. The test can also be made without disconnecting the diode form the circuit, using a 12V battery and a 45 watt light bulb (automobile light) as shown in the illustration. The light should turn totally on only in one direction, as shown below.

**WINDING RESISTANCE AT 20° C  
ROOM TEMPERATURE**

| <u>Size</u> | <u>Stator Ω</u> | <u>Rotor Ω</u> | <u>Exciter Ω</u> |
|-------------|-----------------|----------------|------------------|
| 3.5         | 0.7             | 9.22           | 4.0              |
| 4.0         | 0.7             | 9.28           | 4.0              |
| 5.0         | 0.54            | 2.97           | 2.24             |
| 6.0         | 0.54            | 2.97           | 2.24             |
| 8.0         | 0.49            | 2.85           | 4.41             |
| 12.0        | 0.250           | 5.65           | 0.60             |

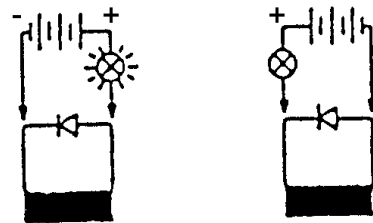


# **TROUBLE SHOOTING**


| PROBLEMS                                     | CAUSES   | REMEDIES   |
|--|--|--|
| <b>ALTERNATOR EXCITATION FAILURE</b>         | <ol style="list-style-type: none"> <li>1. Low Speed</li> <li>2. Faulty capacitor</li> <li>3. Faulty winding</li> </ol>   | <ol style="list-style-type: none"> <li>1. Check RPM and set at nominal value.</li> <li>2. Check and replace.</li> <li>3. Check that winding resistance is as shown in the tables.</li> </ol>   |
| <b>HIGH NO-LOAD VOLTAGE</b>                  | <ol style="list-style-type: none"> <li>1. Speed too high.</li> <li>2. Capacitor with high capacity.</li> </ol>   | <ol style="list-style-type: none"> <li>1. Check and adjust RPM's</li> <li>2. Check and replace</li> </ol>  |
| <b>LOW NO-LOAD VOLTAGE</b>                   | <ol style="list-style-type: none"> <li>1. Speed too low.</li> <li>2. Faulty rotary diodes.</li> <li>3. Breakdown in windings.</li> <li>4. Capacitor with high capacity.</li> </ol> | <ol style="list-style-type: none"> <li>1. Check and adjust RPM's</li> <li>2. Check and replace.</li> <li>3. Check winding resistance, as per tables.</li> <li>4. Check and replace.</li> </ol> |
| <b>PROPER NO-LOAD BUT LOW LOADED VOLTAGE</b> | <ol style="list-style-type: none"> <li>1. Low loaded speed.</li> <li>2. Load too large.</li> <li>3. Rotary diodes short-circuited</li> </ol>                                       | <ol style="list-style-type: none"> <li>1. Check and regulate RPM.</li> <li>2. Check and change.</li> <li>3. Check and replace.</li> </ol>  |
| <b>UNSTABLE VOLTAGE</b>                      | <ol style="list-style-type: none"> <li>1. Loose contacts.</li> <li>2. Uneven rotation.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Check connections.</li> <li>2. Check for uniform rotation speed.</li> </ol>  |
| <b>NOISY GENERATOR</b>                       | <ol style="list-style-type: none"> <li>1. Broken bearings.</li> <li>2. Poor couplings.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Replace.</li> <li>2. Check and repair.</li> </ol>  |

# PARTS BREAKDOWN

HYDO 350CXT-6

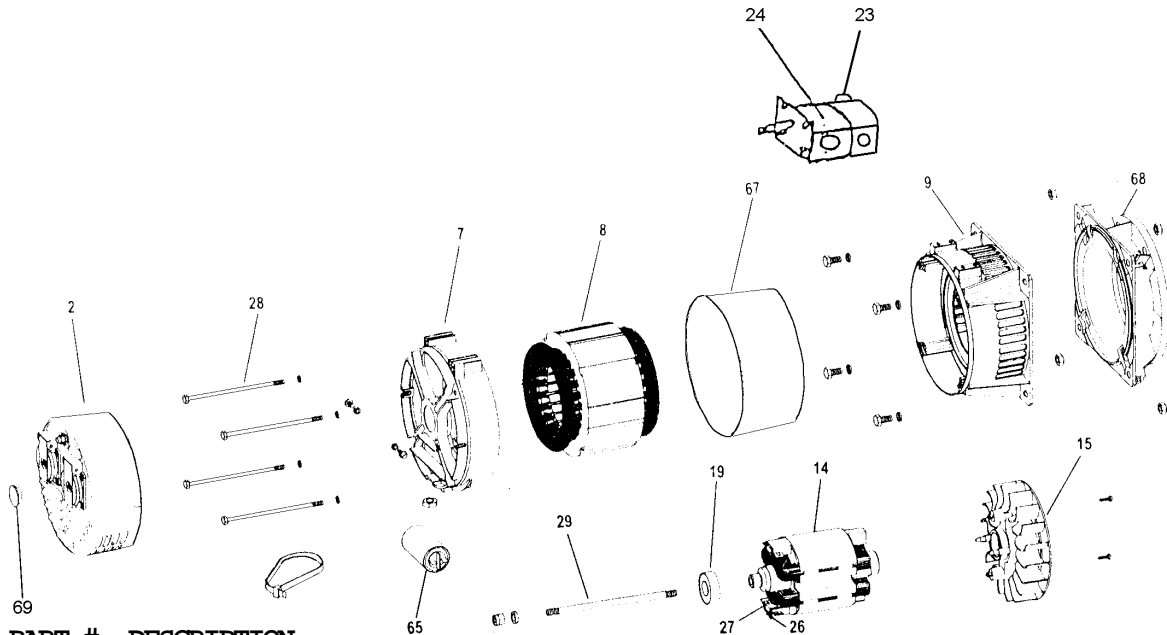


| <u>No.</u> | <u>PART #</u> | <u>DESCRIPTION</u>             |
|------------|---------------|--------------------------------|
| 2          | 572235        | Rear End Cover                 |
| 7          | 572326        | Rear End Casting               |
| 8          | 572327        | Stator                         |
| 9          | 572238        | Drive End Casting              |
| 14         | 572329        | Rotor                          |
| 15         | 572330        | Fan                            |
| 19         | 572064        | Rear Bearing                   |
| 20         | 572154        | Rubber Mounts                  |
| 23         | 572206        | Flow Control Cartridge (6 GPM) |
| 24         | 572324        | Motor w/Flow Control           |
| 25         | 572128        | Mounting Rails                 |
| 26         | 572331        | Diodes                         |
| 27         | 572332        | Varister                       |
| 28         | 572333        | Studs                          |
| 29         | 572334        | Thru Bolt                      |
| 65         | 572062        | Capacitor (20 MFD)             |
| 67         | 572335        | Band                           |
| 68         | 572309        | Face Plate                     |
| 69         | 572336        | Rubber Cap                     |
|            | 572310        | Stub Shaft                     |
|            | 572318        | Complete Generator             |
|            | 572309        | Alum. Mounting Plate           |
|            | 572359        | 120V. 20 Amp Recpt.            |
|            | 572052        | Volt Meter                     |

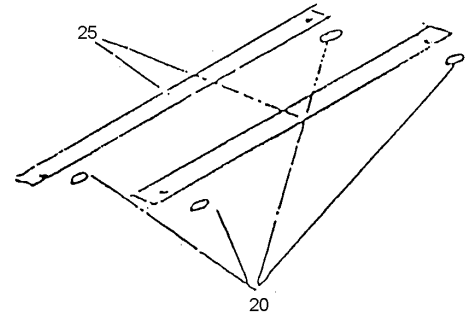


| <u>PART #</u> | <u>OPTIONAL CONTROL PANEL</u> |
|---------------|-------------------------------|
| 572227        | Complete Control Panel        |
| 572228        | Control Box (Shell)           |
| 572052        | Volt Meter                    |
| 572054        | Receptacle 120 Volt           |
| 572100        | Waterproof Recpt. Cover       |
| 572226        | GFI Outlet 120 Volt           |
| 572158        | Overload Protection Device    |

# HYDRAULIC MOTOR HOSE HOOK-UP

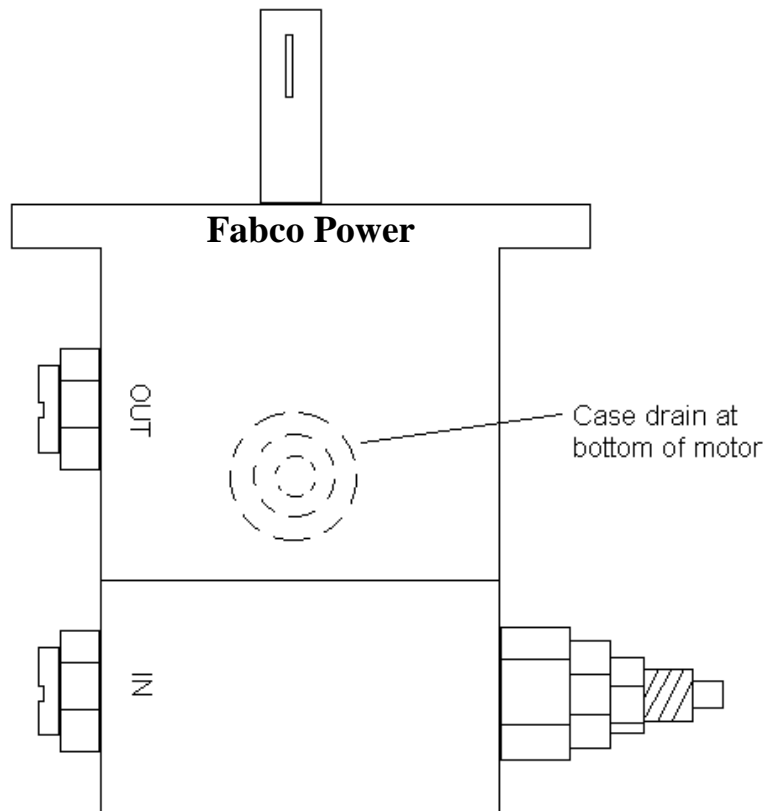



# FIXED DISPLACEMENT TYPE GEAR PUMP

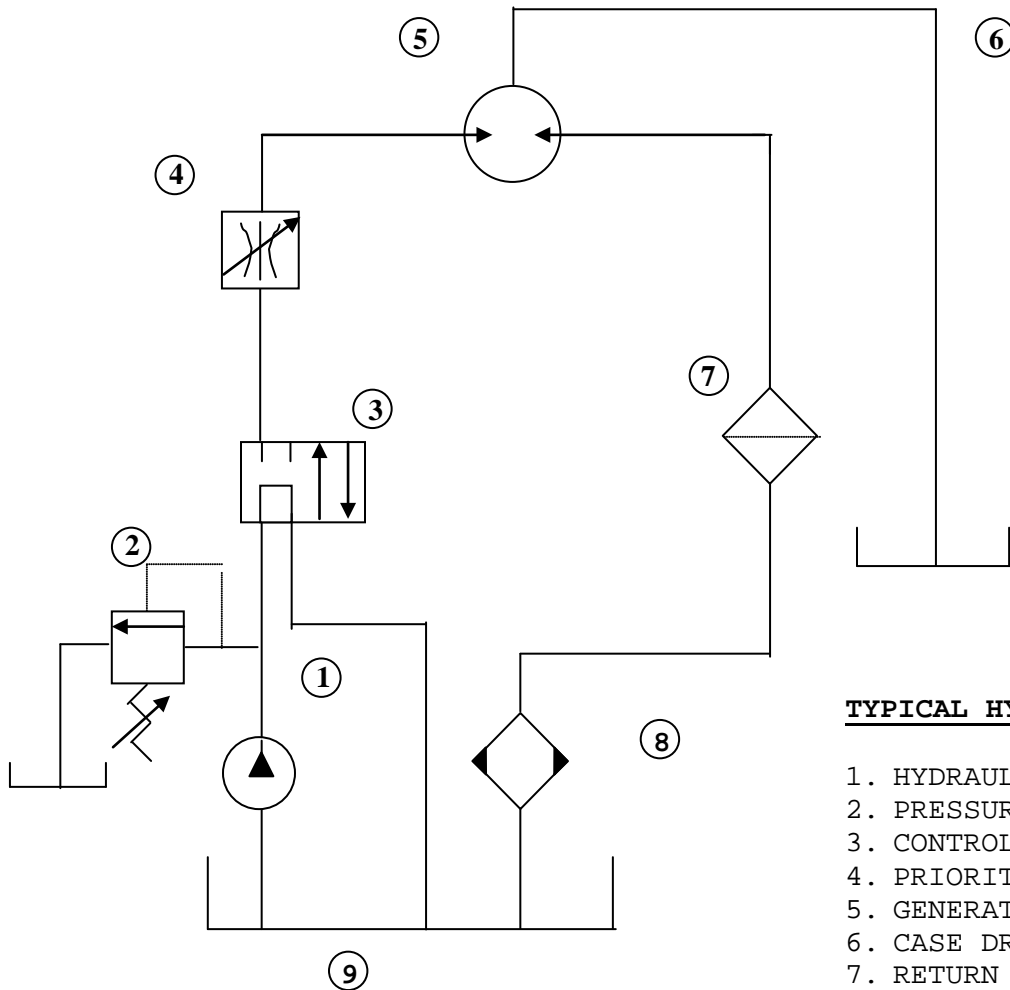


**TYPICAL HYDRAULIC SCHEMATIC**

1. HYDRAULIC PUMP
2. PRESSURE RELIEF VALVE
3. CONTROL VALVE
4. PRIORITY FLOW CONTROL\*
5. GENERATOR HYRAULIC MOTOR
6. CASE DRAIN LINE\*\*
7. RETURN LINE FILTER
8. OIL COOLER
9. HYDRAULIC FLUID RESERVOIR

\* Some units may be equipped with integral priority flow control, refer to specific model number.

\*\* External case drain line may be required on some units refer to specific model number.  
When external case drain is required it should be unobstructed direct return to reservoir with a minimum I.D. no less than that of case drain port on generator motor.


**FOR SPECIFIC INSTALLATION RECOMMENDATIONS CONSULT FACTORY**

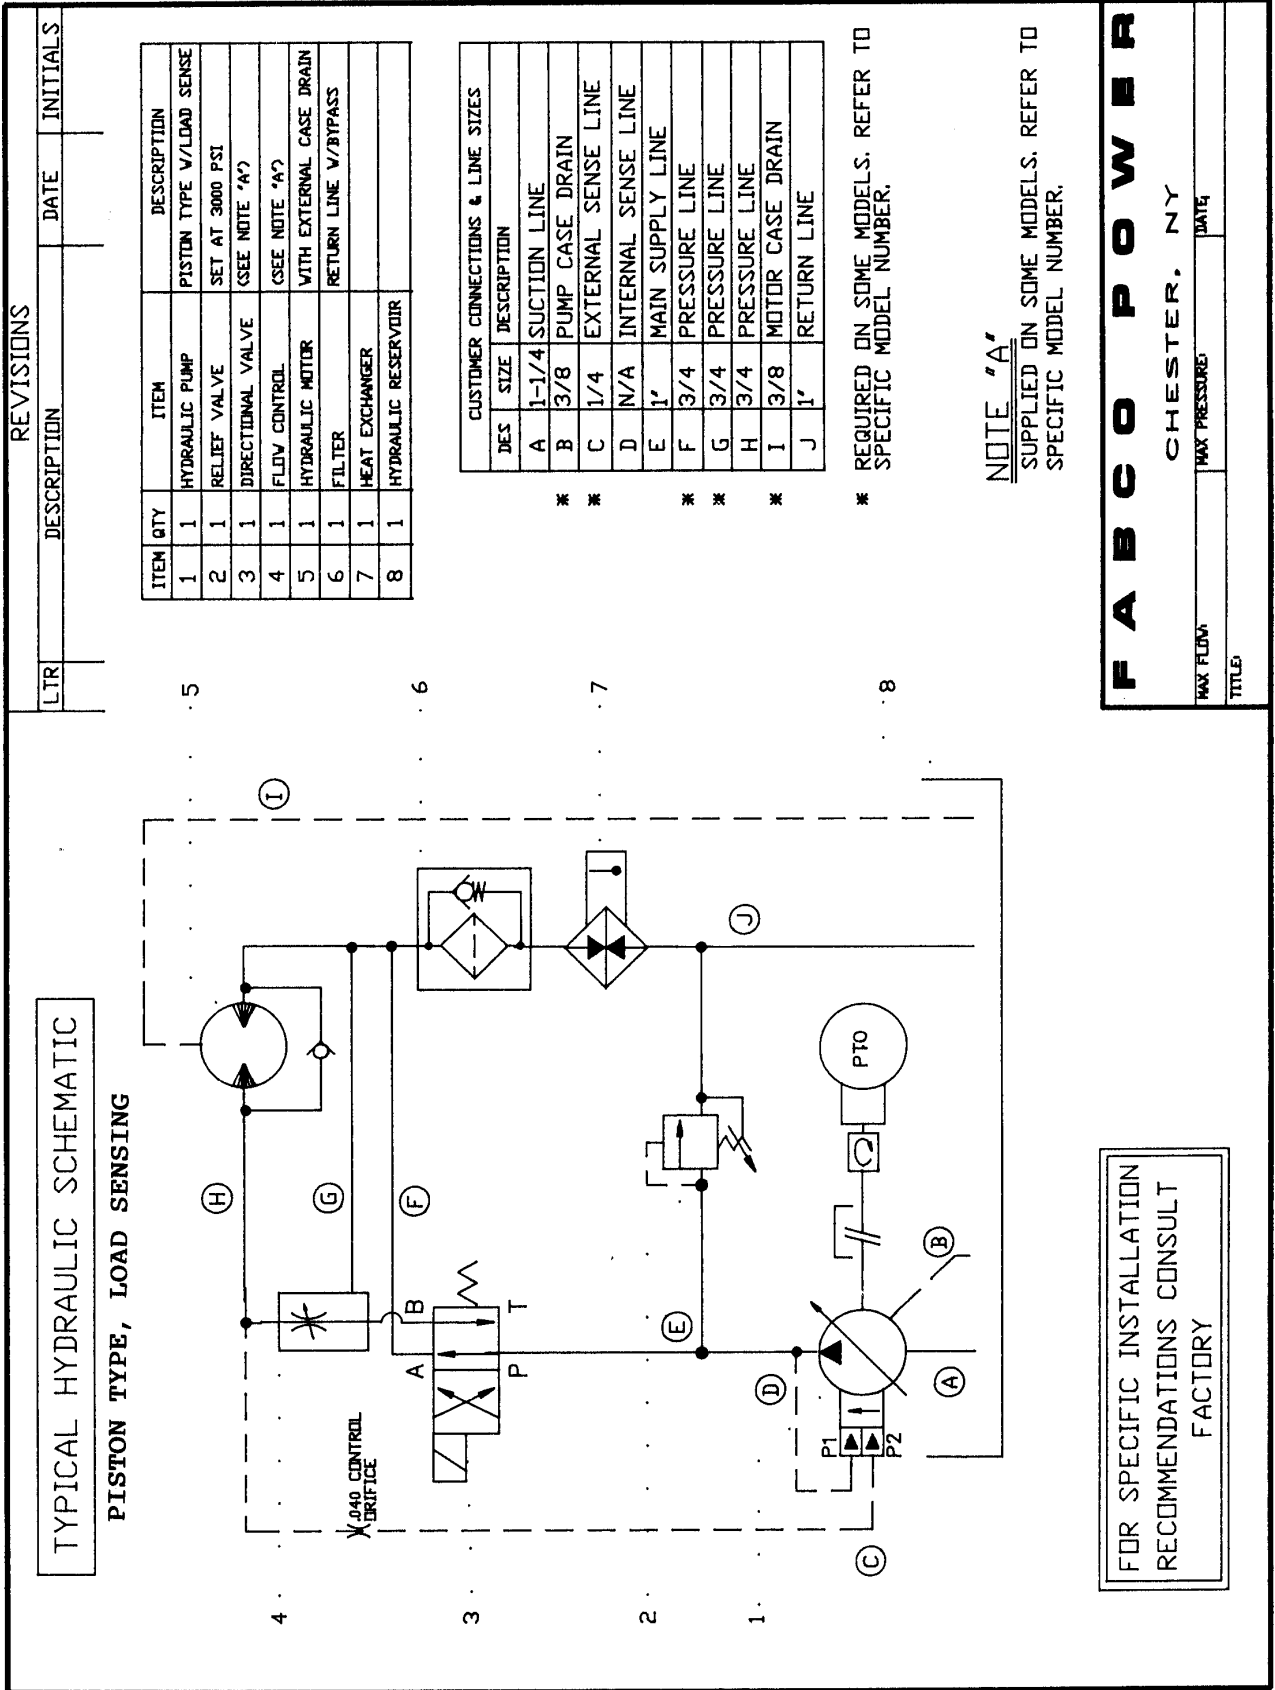

| REVISIONS |             |      |          |
|-----------|-------------|------|----------|
| LTR       | DESCRIPTION | DATE | INITIALS |
|           |             |      |          |

FOR SPECIFIC INSTALLATION  
RECOMMENDATIONS CONSULT  
FACTORY

FABCO POWER BRUSH LESS GENERATOR WIREING INSTRUCTION MANUAL

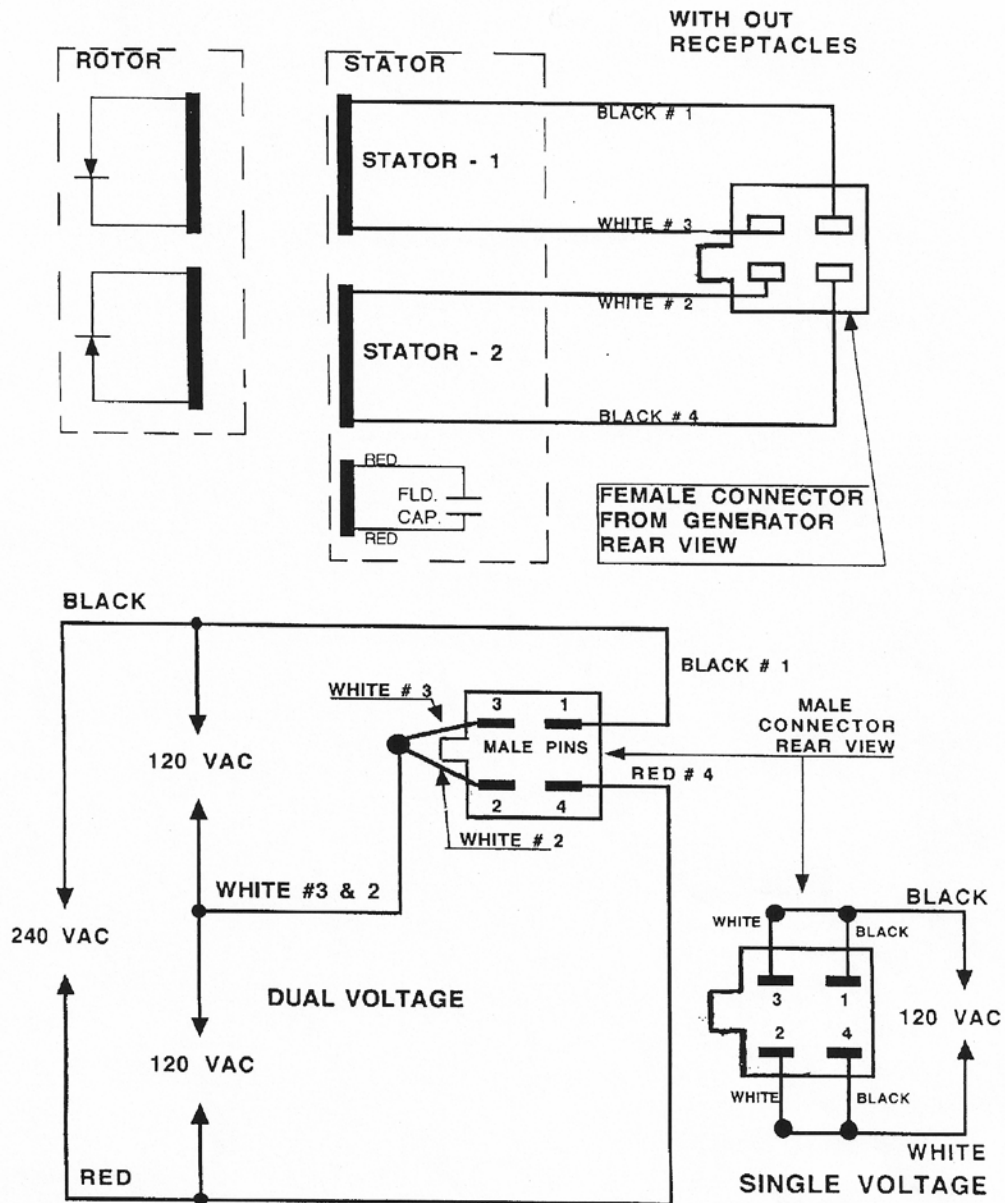


REV-4-11/24/98 GRB

**FABCO POWER**

**BRUSHLESS GENERATOR WIRING**

INSTRUCTION  
MANUAL  
SINGLE VOLTAGE  
120 VAC WITH  
RECEPTACLES

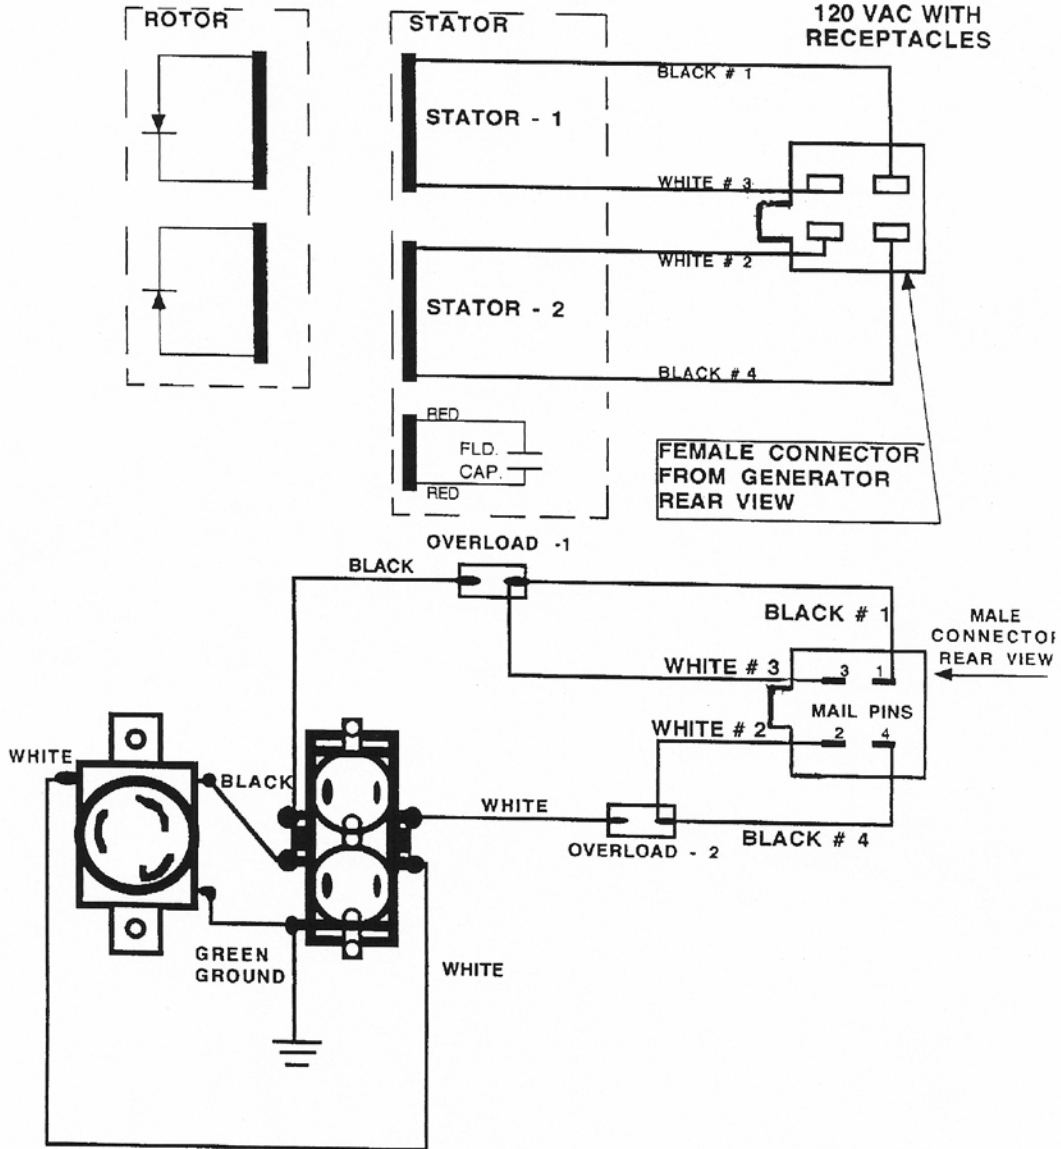


REV-3-11/24/98  
G.R BRIGGS

**FABCO POWER**

**BRUSHLESS GENERATOR WIRING**


INSTRUCTION  
MANUAL  
DUAL VOLTAGE  
120 / 240 VAC WITH  
RECEPTACLES

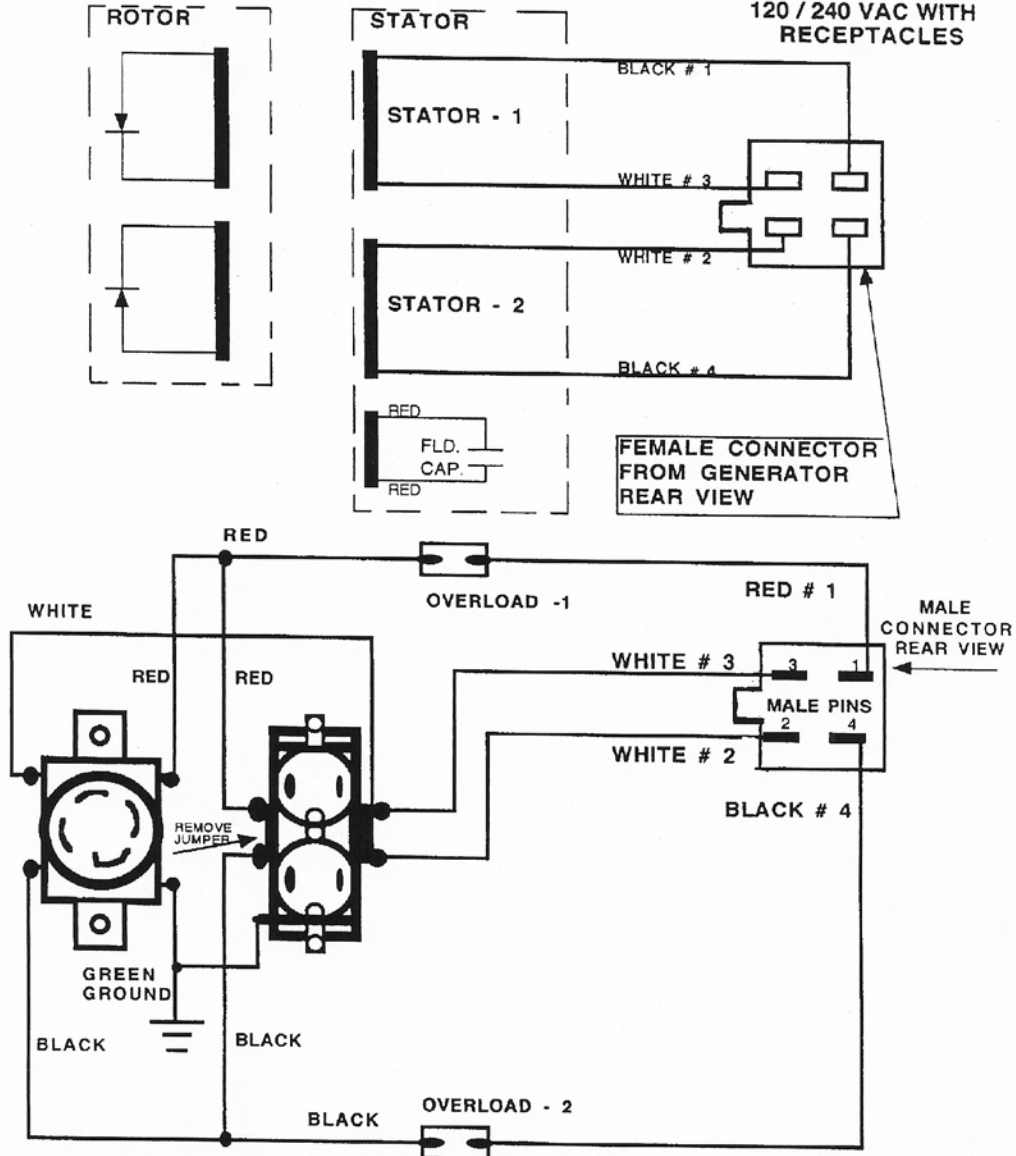

REV-3-11/24/98 GRB

# FABCO POWER BRUSHLESS GENERATOR WIRING


## 120 VOLT SINGLE PHASE FACTORY WIRING DIAGRAM

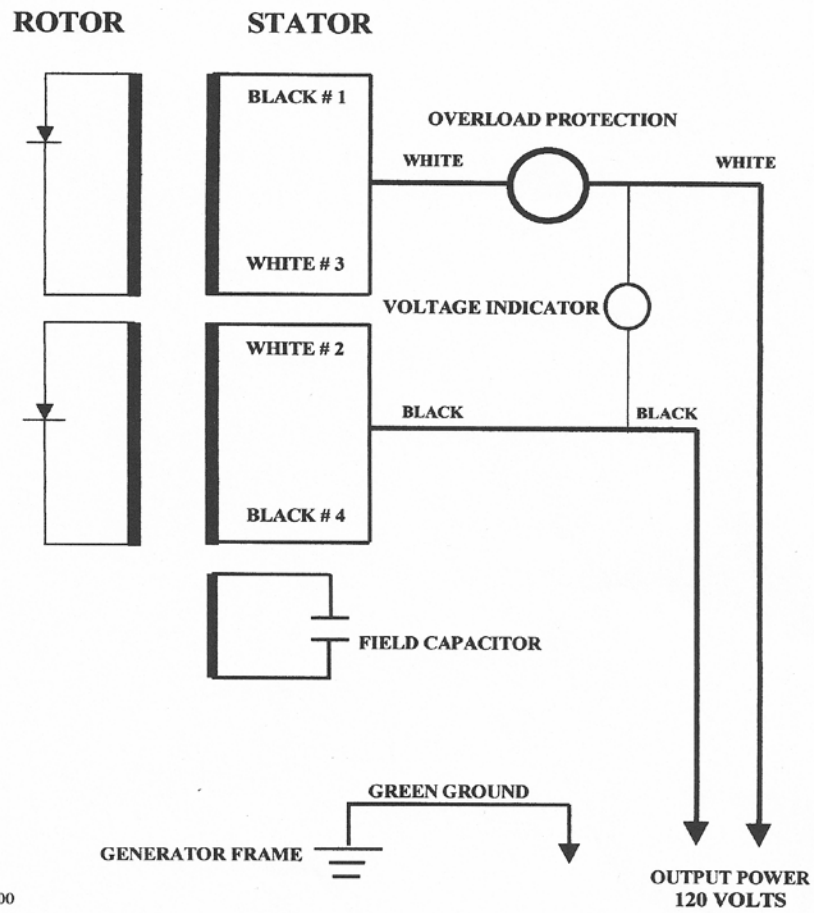

REV-2-GRB-10/24/00

**FABCO POWER BRUSHLESS GENERATOR WIRING**

**220 VOLT SINGLE PHASE FACTORY WIRING DIAGRAM**

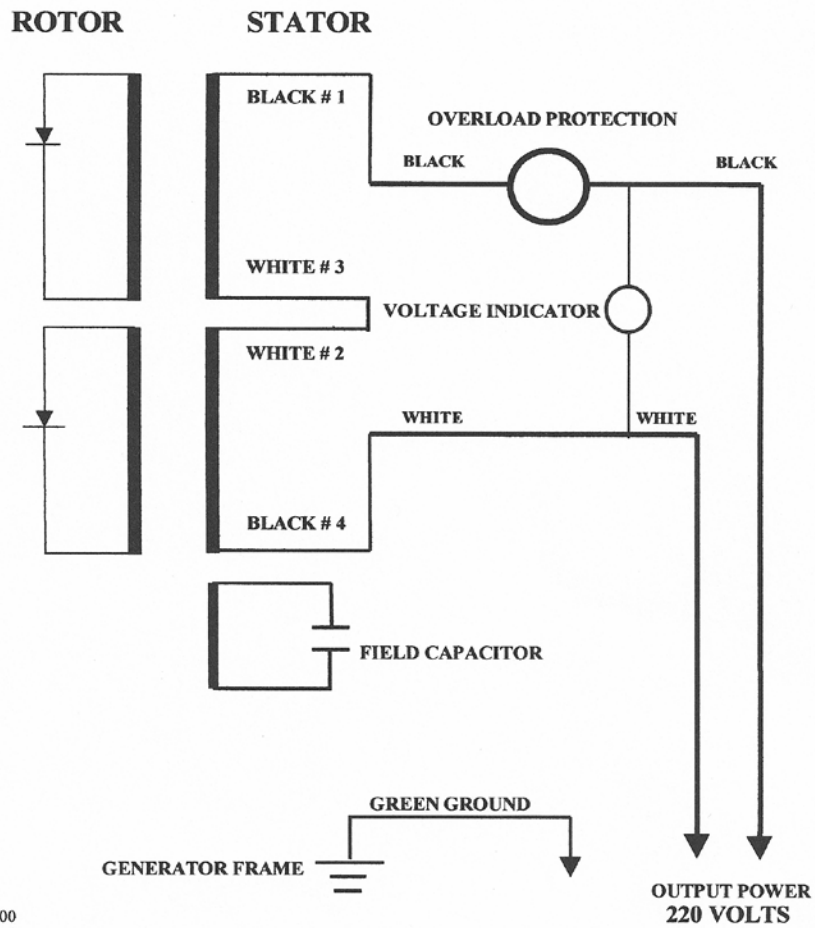

REV-1-GRB-10/24/00